


MSI-2HB Safety relays

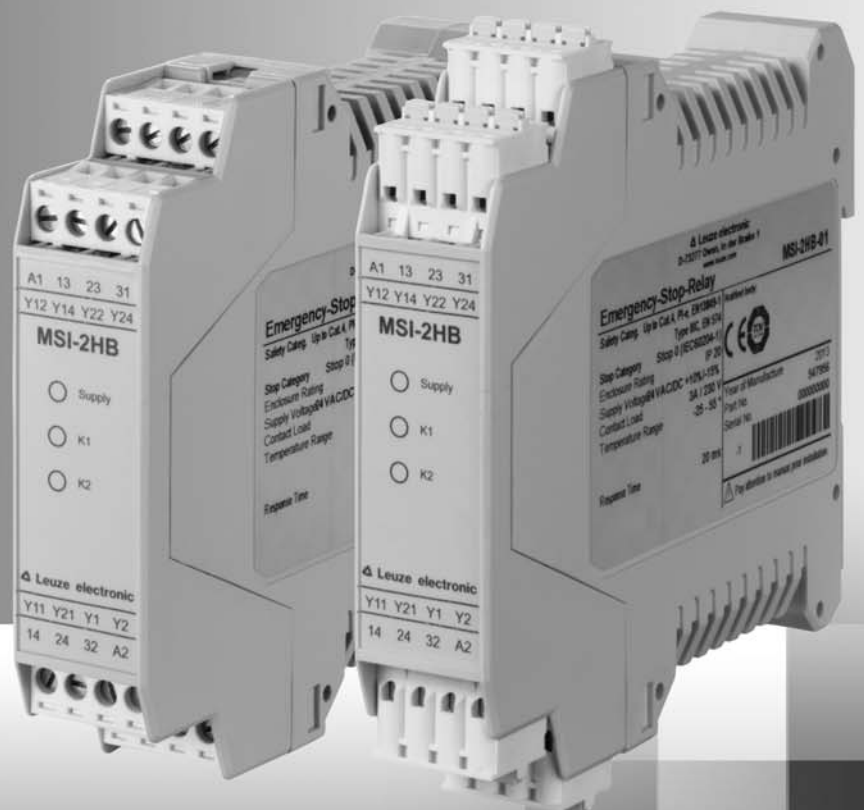

© 2013

Leuze electronic GmbH + Co. KG

In der Braike 1

D-73277 Owen / Germany

Phone: +49 7021 573-0

Fax: +49 7021 573-199

<http://www.leuze.com>

info@leuze.de

1	About this document.	4
1.1	Used symbols and signal words	4
1.2	Checklists	4
2	Safety	5
2.1	Approved purpose and foreseeable improper operation	5
2.1.1	Proper use	5
2.1.2	Foreseeable misuse	6
2.2	Competent persons	6
2.3	Responsibility for safety	6
2.4	Disclaimer	7
3	Device description	8
3.1	System overview	9
3.2	Display elements	9
4	Functions	10
5	Applications	11
6	Mounting.	12
7	Electrical connection	13
7.1	Terminal assignments	13
7.2	Circuit diagram examples	14
8	Starting up the device.	15
8.1	Switching on	15
9	Testing	16
9.1	Before the initial start-up and following modifications	16
9.1.1	Checklist – initial start-up	16
9.2	To be performed periodically by a competent person	17
9.3	To be performed daily by the operating personnel	18
9.3.1	Check list – daily or at change of shift	18
10	Maintenance.	19
11	Disposing	20
12	Service and support	21
13	Technical data	22
13.1	Dimensions	23
14	Order guide	25
15	EC Declaration of Conformity.	26

1 About this document

1.1 Used symbols and signal words

Table 1.1: Warning symbols and signal words


	Symbol indicating dangers to persons
NOTICE	Signal word for property damage Indicates dangers that may result in property damage if the measures for danger avoidance are not followed.
CAUTION	Signal word for minor injury Indicates dangers that may result in minor injury if the measures for danger avoidance are not followed.
WARNING	Signal word for serious injury Indicates dangers that may result in severe or fatal injury if the measures for danger avoidance are not followed.
DANGER	Signal word for life-threatening danger Indicates dangers with which serious or fatal injury is imminent if the measures for danger avoidance are not followed.

Table 1.2: Other symbols



	Symbol for tips Text passages with this symbol provide you with further information.
	Symbols for action steps Text passages with this symbol instruct you to perform actions.

Table 1.3: Terms and abbreviations

AOPD	Active Optoelectronic Protective Device Active Optoelectronic Protective Device
EDM	External Device Monitoring
OSSD	Output Signal Switching Device
SSD	Secondary Switching Device
RES	Start/ RE start interlock
PFH _d	Probability of a dangerous failure per hour Probability of dangerous Failure per Hour
MTTF _d	Mean time to a dangerous failure (Mean Time To dangerous Failure)
PL	Performance Level

1.2 Checklists

The checklists (see chapter 9 „Testing“) serve as a reference for the machine manufacturer or supplier. They replace neither testing of the complete machine or system prior to the initial start-up nor their periodic testing by a competent person. The checklists contain minimum testing requirements. Depending on the application, other tests may be necessary.

2 Safety

Before using the safety relay, a risk evaluation must be performed according to valid standards (e.g. EN ISO 12100, ISO 13849-1, EN/IEC 61508, EN/IEC 62061). The result of the risk assessment determines the required safety level of the safety relay (see table 13.1). For mounting, operating and testing, this document as well as all applicable national and international standards, regulations, rules and directives must be observed. Relevant and supplied documents must be observed and handed to the affected personnel.

↳ Before working with the safety relay, completely read and understand the documents applicable to your task.

In particular, the following national and international legal regulations apply for the start-up, technical inspections and work with safety relays:

- Machinery directive 2006/42/EC
- Low voltage directive 2006/95/EC
- Electromagnetic compatibility 2004/108/EC
- Use of Work Equipment Directive 2009/104/EG
- OSHA 1910 Subpart 0
- Safety regulations
- Accident-prevention regulations and safety rules
- Industrial safety regulation and employment protection act
- Product Safety Act



For safety-related information you may also contact the local authorities (e.g., industrial inspectorate, employer's liability insurance association, labor inspectorate, occupational safety and health authority).

2.1 Approved purpose and foreseeable improper operation

DANGER
<p>Electrically live systems pose a risk of electric shock!</p> <p>↳ During all conversions, maintenance work and inspections, make certain that the voltage supply is interrupted and protected against being restarted again.</p> <p>↳ Only have work on the electrical system and electronics performed by a competent person.</p>

2.1.1 Proper use

WARNING
<p>A running machine may result in serious injury!</p> <p>↳ Make certain that the safety relay is correctly connected and that the protective function of the protective device is ensured.</p> <p>↳ Make certain that, during all conversions, maintenance work and inspections, the system is securely shut down and protected against being restarted.</p>

Only if the safety relay is correctly connected and correctly started up is the protective function of the protective device ensured. To prevent misuse and resulting dangers, the following must be observed:

- These operating instructions are included in the documentation of the system on which the protective device is mounted and are available to the operating personnel at all times.
- The safety relay is used as a safety monitoring device in combination with a two-hand relay for safeguarding locations of hazard on machines. The machine control must be designed so that the switch command of the safety relay is appropriately processed in a fail-safe manner.
- The safety relay must only be used after it has been selected in accordance with the respectively applicable instructions and relevant standards, rules and regulations regarding labor protection and safety at work, and after it has been installed, connected, checked and commissioned by a **competent person**.
- The safety relay must only be connected and commissioned in accordance with its specifications (technical data, environmental conditions, etc.).
- The “Reset” acknowledgment button for unlocking the start/restart interlock must be located outside of the danger zone.
- The entire danger zone must be visible from the installation site of the acknowledgment button.
- The safety relay must be selected so that its safety-related capability meets or exceeds the required Performance Level PL ascertained in the risk assessment (see table 13.1).
- The machine or system control must be electrically influenceable so that a switch command sent by the safety relay results in the immediate shutdown of the dangerous movement.
- The construction of the safety relay must not be altered. When manipulating the safety relay, the protective function is no longer guaranteed. Manipulating the safety relay also voids all warranty claims against the manufacturer of the safety relay.
- The safety relay must be tested regularly by a competent person (see chapter 9 „Testing“).
- The safety relay must be exchanged after a maximum of 20 years. Repairs or the exchange of parts subject to wear and tear do not extend the service life.

2.1.2 Foreseeable misuse

Any use other than that defined under the “Approved purpose” or which goes beyond that use is considered improper use.

Alone, the safety relay is not a complete protective device. It is not suitable for use in the following cases:

- in explosive or easily flammable atmospheres.
- on machines or systems with long stopping times.

2.2 Competent persons

Prerequisites for competent persons:

- They have a suitable technical education.
- They know the rules and regulations for labor protection, safety at work and safety technology and can assess the safety of the machine.
- They know the instructions for the safety relay and the machine.
- They have been instructed by the responsible person on the mounting and operation of the machine and of the safety relay.

2.3 Responsibility for safety

Manufacturer and operating company must ensure that the machine and implemented safety relay function properly and that all affected persons are adequately informed and trained.

The type and content of all imparted information must not lead to unsafe actions by users.

The manufacturer of the machine is responsible for:

- Safe machine construction
- Safe implementation of the safety relay
- Imparting all relevant information to the operating company
- Adhering to all regulations and directives for the safe starting-up of the machine

The company operating the machine is responsible for:

- Instructing the operating personnel
- Maintaining the safe operation of the machine
- Adhering to all regulations and directives for labor protection and safety at work
- Regular testing by competent persons

2.4 Disclaimer

Leuze electronic GmbH + Co. KG is not liable in the following cases:

- Safety relay is not used as intended
- Safety notices are not adhered to.
- Reasonably foreseeable misuse is not taken into account.
- Mounting and electrical connection are not properly performed.
- Proper function is not tested (see chapter 9 „Testing“).
- Changes (e.g., constructional) are made to the safety relay

3 Device description

The MSI-2HB serves as two-hand relay acc. to EN 574, type III C as well as link between 2-channel protective door monitoring and machine control system



Figure 3.1: MSI-2HB with screw terminals

Figure 3.2: MSI-2HB with spring-cage terminals

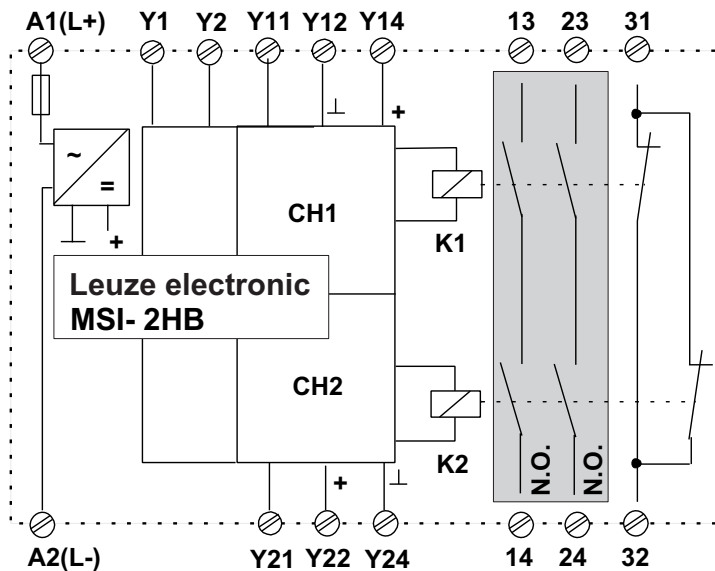



Figure 3.3: Internal circuit diagram of the MSI-2HB

3.1 System overview

- two-channel control with cross circuit monitoring
- Simultaneity monitoring, 0.5 s
- Monitoring of external contactors in the feedback circuit
- 2 release circuits, 1 NC contact as signal circuit
- LED displays Power, K1 and K2
- Operating voltage 24 V AC/DC
- Housing width, 22.5 mm
- Removable connection terminal blocks (screw terminals, spring-cage terminals)

3.2 Display elements

The display elements of the safety relay simplify the start-up and fault analysis.

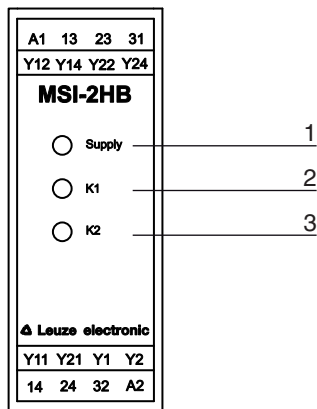

- 1 LED "Supply"
- 2 LED "K1"
- 3 LED "K2"

Figure 3.4: Display elements of the MSI-2HB

Table 3.1: Meaning of the LEDs

LED	Color	Description
Supply	green	Supply voltage on
K1	green	Relay K1 picked up
K2	green	Relay K2 picked up

4 Functions

Two-hand relay type III C, safety category 4

After the supply voltage is applied to A1 and A2 and with closed feedback circuit Y1-Y2, relays K1 and K2 pick up upon simultaneous actuation of the two-hand buttons S1 and S2. The release circuits 13-14 and 23-24 close, signal circuit 31-32 opens. The dangerous movement is enabled. As soon as at least one of the two buttons is again released, K1 and K2 drop out. The dangerous movement is stopped. A restart cannot occur until both two-hand buttons have been released and feedback circuit Y1-Y2 has been closed for at least 150 ms. Due to the low input currents, gold-plated button contacts are to be used.

Sliding safety guard monitoring in accordance with IEC EN 60204-1 stop category 0 with 2 positive-opening position switches and automatic start

After the supply voltage is applied to A1 and A2 and with closed protective doors (position switches S1 and S2 closed), relays K1 and K2 pick up and lock. Upon opening of the safety guard, S1 and S2 open, relays K1 and K2 go dead and drop out. The MSI-2HB remains in this state until the safety guard is closed again.

Simultaneity monitoring

K1 and K2 pick up only if both two-hand buttons or safety switches are actuated in a time window of 0.5 s. If actuation of the second button occurs with a delay of more than 0.5 s, K1 and K2 remain in the normal position. Before reactivating, both buttons must be released.

Cross circuit monitoring

In the event of a cross connection or short circuit to ground in input circuits Y11 and Y21, output relays K1 and K2 are switched off via an electronic fuse. The MSI-2H is again ready for operation approx. 2 s after the cause of the malfunction has been eliminated.

Contactors monitoring (EDM)

For function monitoring of the external contactors, NC contacts of these contactors are looped into feedback circuit Y1-Y2 in series.

5 Applications

- Two-hand relay in accordance with EN 574, type III C
- Two-channel protective door monitoring in accordance with ISO 13849-1 up to category 4

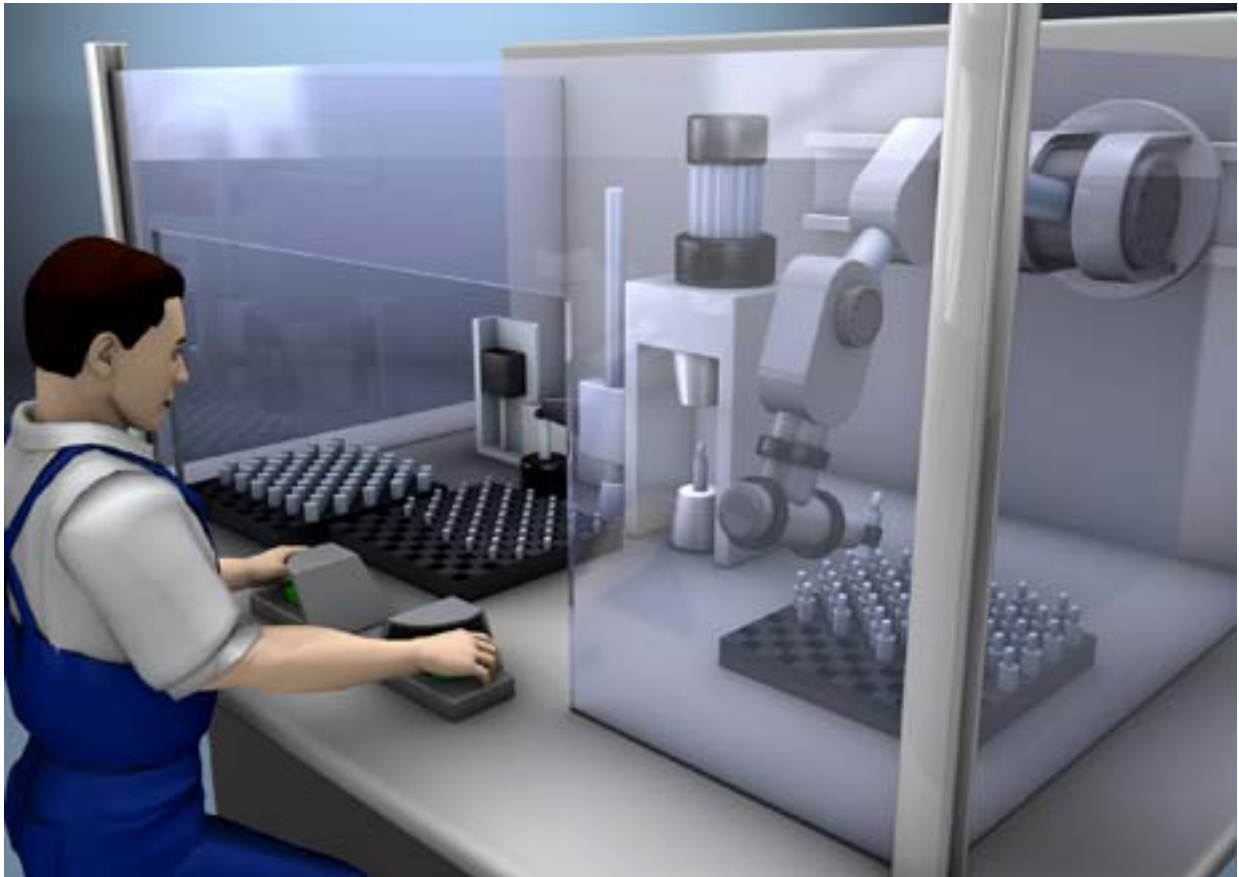


Figure 5.1: Guarding a feeding-in area with two-hand control station and safety relay MSI-2HB

6 Mounting



WARNING

Improper mounting may result in serious injury!

The protective function of the safety relay is only ensured if appropriately and professionally mounted for the respective, intended area of application.

↳ Only allow competent persons to install the safety relay.

↳ Observe the relevant standards, regulations and these instructions.

The safety relay is intended for mounting on a DIN rail in a cabinet.

Prerequisites for mounting:

- Cabinet with appropriate protection rating (at least IP54).
- Sufficient space on the DIN rail.

↳ Snap the safety relay onto the DIN rail.

The safety relay can be connected to the two-hand relays or safety switches.

7 Electrical connection

DANGER

Risk of death by electric shock!

Depending on external wiring, dangerous voltages may be present at the switching outputs.

↳ During all work at the electrical system or electronics, make certain that each voltage supply has been interrupted and protected against being restarted.

The following must be observed for the current supply of the safety relay:

- Supply voltage 24 V DC $\pm 20\%$.
- Safe mains separation acc. to EN/IEC 60742 possible.
- A corresponding power supply unit handles interruptions of the supply voltage up to 10 ms in duration acc. to EN/IEC 61496-1.

WARNING

Improper electrical connection may result in serious injury!

↳ Only allow competent persons to perform the electrical connection.

↳ Make certain that supply and signal lines are laid separately from power lines.

↳ Use appropriate spark extinction for contactors in the cabinet.

↳ Observe the installation notices and operating instructions of the products that are to be connected via the safety relay (drive motors, brakes, etc.).

The following conditions apply for the electrical connection:

- The safety relay is to be integrated in the control acc. to ISO 13849-1.
- No safety-relevant signals are switched via the message outputs.
- There are always two switching contacts integrated in the system switch-off circuit.
- Relay switching contacts are fused/protected externally according to their specifications (see table 13.2).

Connecting the signal lines

For reliable and touch-safe contacts, isolate the connection ends as follows:

- Screw terminals: 7 mm
- Spring-cage terminals: 8 mm

7.1 Terminal assignments

WARNING

Selecting the wrong functions may result in serious accidents!

↳ Always connect safety switches to an external safety relay and activate the restart interlock.

↳ For access guarding, make certain that the restart interlock cannot be unlocked from within the danger zone but that the danger zone can be viewed from the acknowledgment button (Reset).

↳ Select the functions so that the safety relay is used as intended (see chapter 2.1 „Approved purpose and foreseeable improper operation“).

Connected to the safety relay are 16 numbered terminals to which the cables for the various functions are connected.

Table 7.1: Terminal assignments

Terminal	MSI-2HB
A1	+24 V
13	Relay contact 1 IN
23	Relay contact 2 IN
31	Signal contact IN
Y12	Sensor input 1, normal closed contact 24 V
Y14	Sensor input 1, normal open contact 24 V
Y22	Sensor input 2, normal closed contact 24 V
Y24	Sensor input 2, normal open contact 24 V
Y11	Sensor input 1, 0 V
Y21	Sensor input 2, 0 V
Y1	Feedback circuit (EDM)
Y2	Feedback circuit (EDM)
14	Relay contact 1 OUT
24	Relay contact 2 OUT
32	Signal contact OUT
A2	0 V

7.2 Circuit diagram examples

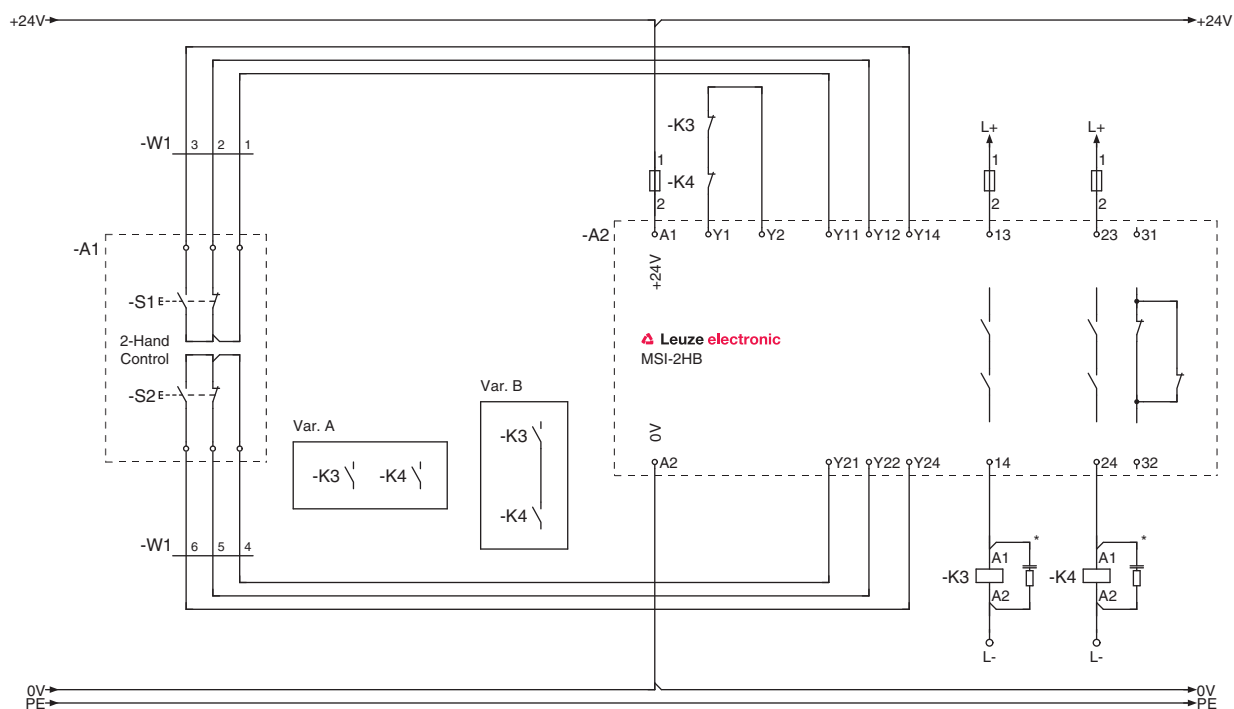


Figure 7.1: MSI-2HB safety relay as two-hand control unit in accordance with EN 574, type III C with contactor monitoring (EDM)

8 Starting up the device



WARNING

Improper use of the safety relay may result in serious injury!

- ↪ Make certain that the entire device and the integration of the protective device was inspected by competent and instructed persons.
- ↪ Make certain that a dangerous process can only be started while the safety devices are switched on.

Prerequisites:

- Safety switch and safety relay were mounted and connected in accordance with the respective instructions.
- Operating personnel were instructed on proper use.
- Dangerous process was switched off and the system has been protected against being restarted again.

↪ During start-up, test the function of the safety relay (see chapter 9 „Testing“).

8.1 Switching on

Requirements for the supply voltage (power supply unit):


- Safe mains separation is ensured (acc. to EN/IEC 60742).
- Changes and interruptions of the supply voltage are handled (acc. to EN/IEC 61496-1).
- The start/restart interlock function of the connected safety sensors or safety relays is activated.

↪ Switch on the current supply.

↪ Check whether the “ON/OFF” LED on the safety relay lights up.

The safety relay is ready for use.

9 Testing

 WARNING
<p>A running machine may result in serious injury!</p> <p>↪ Make certain that, during all conversions, maintenance work and inspections, the system is securely shut down and protected against being restarted.</p>


The safety relays must be exchanged after a maximum of 20 years.

- ↪ Always exchange the entire safety relay.
- ↪ For the tests, observe nationally applicable regulations.
- ↪ Document all tests in a comprehensible manner.

9.1 Before the initial start-up and following modifications

Acc. to IEC/TS 62046 and international regulations (e.g. EU directive 2009/104/EG), tests are to be performed by competent persons in the following situations:

- Prior to the initial start-up
- Following modification to the machine
- After longer machine downtime
- After retrofitting or reconfiguring the safety device (safety relay and/or safety switches)

 WARNING
<p>Unpredictable machine behavior during initial start-up may result in serious injury!</p> <p>↪ Make certain that there are no people in the danger zone.</p>

- ↪ Test the effectiveness of the shutdown function in all operating modes of the machine acc. to the corresponding checklist (see chapter 9.1.1 „Checklist – initial start-up“).
- ↪ Document all tests in a comprehensible manner and include the configuration of the safety relay along with the data for the safety and minimum distances in the documentation.
- ↪ Before they begin work, train the operating personnel on their respective tasks. The training is the responsibility of the operating company.
- ↪ Check whether the safety relay was correctly selected acc. to the locally applicable regulations and directives.
- ↪ Check whether the safety relay is operated acc. to the specified environmental conditions (see chapter 13 „Technical data“).
- ↪ Make certain that the safety relay is protected against overcurrent.
- ↪ Perform a visual inspection for damage and test the electrical function (see chapter 9.2 „To be performed periodically by a competent person“).

Minimum requirements for the power supply unit:

- Safe mains separation.
- Power-failure bridging for at least 10 ms.

Not until proper function of the optoelectronic safety device and the safety relay is ascertained may they be integrated in the control circuit of the system.

9.1.1 Checklist – initial start-up

Interval: once, prior to the initial start-up and following modification

Tester: competent person

Table 9.1: Checklist – initial start-up

Items on the check list	Yes	No
Were all safety directives and standards relevant to this machine type observed?		
Does the Declaration of Conformity of the machine include a listing of these documents?		
Does the safety relay satisfy the safety-related capability (PL, SIL, category) as required by the risk assessment?		
Circuit diagram: Are the safety-related switching outputs (OSSDs) integrated in the downstream machine control acc. to the required safety category?		
Are the switching elements (e.g. contactors) with positive-guided contacts that are controlled by the safety relay monitored by a feedback circuit (EDM)?		
Does the electrical wiring match the circuit diagrams?		
Have the required protective measures against electrical shock been effectively implemented?		
Has the maximum stopping time of the machine been remeasured and recorded in the machine documents?		
Is the required safety distance (protective field to the next point of operation) maintained?		
Are all points of operation of the machine accessible only through the protective field? Are all additional protective devices (e.g. safety guards) correctly mounted and protected against tampering?		
Is the command device for triggering the start/restart interlock of the safety relay or the machine mounted in accordance with specifications?		
Are safety relay, connecting cable, plug, protection caps and command devices undamaged and free of any signs of manipulation?		
Has the effectiveness of the protective function been ensured for all operating modes of the machine by means of a function test?		
Is the start/restart button for resetting the safety relay mounted outside of the danger zone in accordance with specifications in such a way that it cannot be reached from within the danger zone? Can the entire danger zone be seen from the place at which the start/restart button is installed?		
Does the interruption of any given beam cause the dangerous movement to stop?		
Is the safety relay/safety switches effective during the entire dangerous movement of the machine?		
Are the notices for daily testing of the safety sensor legible to the operating personnel and are they located in a highly visible location?		

☞ Store this checklist with the machine documents.

9.2 To be performed periodically by a competent person


The reliable interaction of safety sensor, safety relay and machine must be periodically tested in order to detect changes to the machine or impermissible tampering with the safety sensor. Testing intervals are determined by nationally applicable regulations (recommendation acc. to IEC/TS 62046: 6 months).


☞ Have all tests performed by competent persons.

☞ Observe the nationally applicable regulations and the time periods specified therein.

9.3 To be performed daily by the operating personnel

The function of the safety relay must be checked daily or at change of shifts, and at each change of machine operating mode as specified in the corresponding checklist (see chapter 9.3.1 „Check list – daily or at change of shift“) so that damages or unauthorized manipulations can be detected.

 WARNING
Unpredictable machine behavior during the test may result in serious injury!
↪ Make certain that there are no people in the danger zone.

 WARNING
Faults during the daily inspection may result in serious injury!
If you answer one of the items on the checklist (see table 9.2) with “no”, the machine must no longer be operated.
↪ Have the entire machine inspected by a competent person (see chapter 9.1 „Before the initial start-up and following modifications“).

- ↪ Stop the dangerous state.
- ↪ Check the safety relay and safety switch for damage or tampering.
- ↪ Start the machine.
- ↪ Ensure that the dangerous state is stopped as soon as the safety switch is open.

9.3.1 Check list – daily or at change of shift

Interval: daily or at shift change

Tester: authorized operating personnel or instructed person

Table 9.2: Check list – daily or at change of shift

Items on the check list	Yes	No
Are safety relay, connecting cable, plug and command devices undamaged and without any sign of manipulation?		
Are all point of operations at the machine accessible only through one or more protective fields of light beam safety devices?		
Are all additional protective devices mounted correctly (e.g., safety guard)?		
Does the start/restart interlock prevent the automatic start-up of the machine after the light beam safety device/safety relay has been switched on or activated?		

10 Maintenance

The safety relay is maintenance-free.

11 Disposing

↳ For disposal observe the applicable national regulations regarding electronic components.

12 Service and support

Telephone number for 24-hour standby service:
+49 (0) 702 573-0

Service hotline:
+49 (0) 8141 5350-111
Monday to Thursday, 8.00 a.m. to 5.00 p.m. (UTC+1)
Friday, 8.00 a.m. to 4.00 p.m. (UTC +1)

E-mail:
service.protect@leuze.de

Return address for repairs:
Service Center
Leuze electronic GmbH + Co. KG
In der Braike 1
D-73277 Owen / Germany

13 Technical data

Table 13.1: Safety-relevant technical data

Category in accordance with EN ISO 13849-1	Category 4
Stop category acc. to EN/IEC 60204-1	Stop 0
Performance Level (PL) in accordance with EN ISO 13849-1	PL e
Probability of a dangerous failure per hour (PFH _b)	3.8 x 10 ⁻⁸
Mean time to dangerous failure (MTTF _d)	70 years
Service life (T _M)	20 years
B10 _a (low load 20%)	20,000,000 switching cycles
B10 _a with DC1 (ohmic load)	400,000 switching cycles
B10 _a with AC1 (ohmic load)	400,000 switching cycles
B10 _a with DC13 (inductive load)	400,000 switching cycles
B10 _a with AC15 (inductive load)	400,000 switching cycles
DC	99%
Mechanical life time	10 x 10 ⁶ switching cycles
Max. switching frequency	3600 switching cycles/h
Protection rating	Housing IP 40 Terminals IP 20

Table 13.2: Electrical data, protection rating, environment

Operating voltage U _b	+24 V AC/DC -15 ... +10%
Residual ripple (with DC)	
Frequency (with AC)	50 ... 60 Hz
Power consumption (with AC)	2.1 W
Power consumption (with DC)	1.9 W
External safeguarding for supply circuit	1 A, delay-action
Output contacts	2 normal open contacts, 1 normal closed contact, AgSnO2 gold flash plated
Switching capacity of the contacts acc. to EN/IEC 60947-5-1	AC-15: 230 V / 6 A *) DC-13: 24 V / 6 A **) DC-13: 24 V / 3 A *) *) 3,600 switching cycles/h, **) 360 switching cycles/h
Max. continuous current per current path	3 A
External contact fuse protection per current path	5 A quick-action or 3.15 A delay-action
Control voltage/current on Y11, Y21, Y2	24 V DC / 60 mA
Admissible input line resistance	< 70 Ω

Permissible wire gauge screw terminals	0.2 ... 2.5 mm ² (AWG 24-12)
Permissible wire gauge spring-cage terminals	0.2 ... 1.5 mm ² (AWG 24-16)
Air clearance and creepage distance	DIN VDE 0110-1:04.97: 4 kV
Interference emission	EN 50081-1, -2
Interference rejection	EN 50082-2
Temperature range, operation	-20 ... +55 °C
Dimensions	see chapter 13.1
Weight	Approx. 200 g

Table 13.3: Timing

Pickup delay	50 ms
Regression delay, reaction time	20 ms
Time window simultaneity monitoring, max.	0.5 s
Recovery time	< 150 ms
Electronic fuse Response/recovery time	2 s / 2 s

13.1 Dimensions

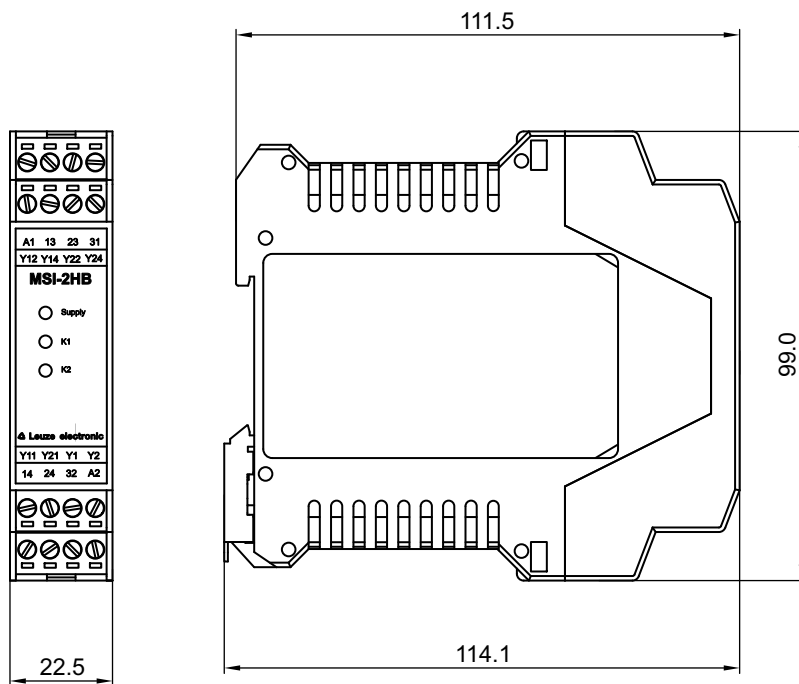


Figure 13.1: Dimensions MSI-2HB-01

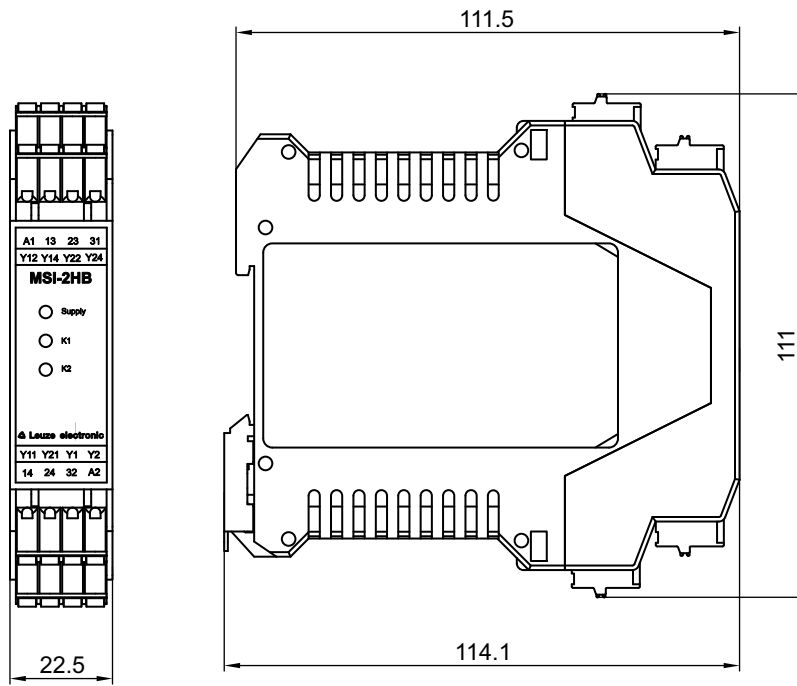


Figure 13.2: Dimensions MSI-2HB-02

14 Order guide

Table 14.1: MSI-2HB safety relays

Part no.	Article	Description
547956	MSI-2HB-01	Safety relay, screw terminals
547957	MSI-2HB-02	Safety relay, spring-cage terminals


15 EC Declaration of Conformity



the **sensor** people

EG-KONFORMITÄTS- ERKLÄRUNG (ORIGINAL)	EC DECLARATION OF CONFORMITY (ORIGINAL)	DECLARATION CE DE CONFORMITE (ORIGINAL)
Der Hersteller	The Manufacturer	Le constructeur
	Leuze electronic GmbH + Co. KG In der Braike 1, PO Box 1111 73277 Owen, Germany	
erklärt, dass die nachfolgend aufgeführten Produkte den ein- schlägigen Anforderungen der genannten EG-Richtlinien und Normen entsprechen.	declares that the following listed products fulfil the relevant provi- sions of the mentioned EC Direc- tives and standards.	déclare que les produits identifiés suivants sont conformes aux directives CE et normes men- tionnées.
Produktbeschreibung:	Description of product:	Description de produit:
Zweihandrelais MSI-2HB Seriennummer siehe Typschild	Two-Hand Relay MSI-2HB Serial no. see name plates	Relais bimanuel MSI-2HB N° série voir plaques signalétiques
Angewandte EG-Richtlinie(n):	Applied EC Directive(s):	Directive(s) CE appliquées:
2006/42/EG 2004/108/EG 2006/95/EG	2006/42/EC 2004/108/EC 2006/95/EC	2006/42/CE 2004/108/CE 2006/95/CE
Angewandte Normen:	Applied standards:	Normes appliquées:
EN 55011:2007; EN 50178:1997; EN 61496-1:2004/A1 :2008; EN ISO 13849-1:2008 (Kat 4 PL) IEC 61508-1:2010/-2:2010/-4:2010 (SIL3) ; EN 574:1996+A1:2008 ; EN ISO 13850:2008		
Benannte Stelle / Baumusterprüfbescheinigung:	Notified Body / Certificate of Type Examination:	Organisme notifié / Attestation d'examen CE de type:
TÜV-SÜD PRODUCT SERVICE GmbH Zertifizierungsstelle Ridlerstraße 65 D-80339 München	/	Z10 09 12 22795 093
Bevollmächtigter für die Zusam- menstellung der technischen Unterlagen:	Authorized person to compile the technical file:	Personne autorisée à constituer le dossier technique:
André Thieme; Leuze electronic GmbH + Co. KG Liebigstr. 4; 82256 Fuerstenfeldbruck; Germany		

Owen, 01.10.2013
Datum / Date / Date


Ulrich Balbach, Geschäftsführer / Director / Directeur

Leuze electronic GmbH + Co. KG
In der Braike 1
D-73277 Owen
Telefon +49 (0) 7021 573-0
Telefax +49 (0) 7021 573-199
info@leuze.de
www.leuze.com

Leuze electronic GmbH + Co. KG, Sitz Owen, Registergericht Stuttgart, HRA 230712
Persönlich haftende Gesellschafterin Leuze electronic Geschäftsführungs-GmbH,
Sitz Owen, Registergericht Stuttgart, HRB 230550
Geschäftsführer: Ulrich Balbach, Dr. Matthias Kirchherr
USt-IdNr. DE 145912521 | Zollnummer 2554232
Es gelten ausschließlich unsere aktuellen Verkaufs- und Lieferbedingungen
Only our current Terms and Conditions of Sale and Delivery shall apply

Nr. 50124556-2013/10

